TABLE OF CONTENTS

SECTION 9

SUPPLEMENTS

Paragraph No.	Page No.	
9.1 General	9-1	
1 Air Conditioning Installation	9-3	
2 Bendix/King KAP 100 Series Flight Control System	9-7	
3 Auxiliary Vacuum System	9-9	
4 Bendix/King KLN 89 (B) GPS Navigation System(12 Pages)	9-15	
5 Bendix/King KX 155A Comm/Nav System(12 Pages)	9-27	
6 Bendix/King KAP 140 Series Flight Control System	9.39	
7 Garmin GNS 430 Nav/Comm(8 Pages)	9-41	
8 S-TEC System 55 Autopilot	9-49	
9 S-TEC Manual Electric Trim System	9-51	
10 BF Goodrich Skywatch Traffic Advisory System		
Model SKY497(6 Pages)	9-53	
11 BF Goodrich WX-500 Stormscope Series II Weather		
Mapping Sensor	9-59	
Summer of the 130 Italy Collins with Hallic Advisory		
and Lightning Strike Advisory Data(8 Pages)	9-63	
ozza ozza zamoponeo	9-71	
2 2 2 5 5 5 total 5521 7 taophot	9-81	
15 S-TEC ADF 650A System	9-83	
17 S-TEC DME 450 (4 Pages)	9-89	
(4 Pages)	9-95	
18 Garmin GTX 330 Transponder(4 Pages) 19 Garmin GNS 530 Nav/Comm with Traffic Advisory	9-99	
and Lightning Strike Advisory Data(8 Pages)	9-103	
20 Avidyne FlightMax Entegra Primary	9-103	
Flight/Multi Function Displays(30 pages)	0.111	
21 Mid-Continent 4300-4XX Series	7-111-	
- Electric Attitude Indicator(4 pages)	0_130	
22 S-TEC ADF-650D System (10 pages)	0.142	
(10 pages)	J-143	
ISSUED: JULY 12, 1995 REPORT: VB-1611		
REVISED: JANUARY 9, 2006 9-i		

· -

SECTION 9

SUPPLEMENTS

9.1 GENERAL

This section provides information in the form of Supplements which are necessary for efficient operation of the airplane when equipped with one or more of the various optional systems and equipment not approved with the standard airplane.

All of the supplements provided in this section are FAA Approved and consecutively numbered as a permanent part of this Handbook. The information contained in each Supplement applies only when the related equipment is installed in the airplane.

ISSUED: JULY 12, 1995

REPORT: VB-1611

THIS PAGE INTENTIONALLY LEFT BLANK

REPORT: VB-1611

ISSUED: JULY 12, 1995

PILOT'S OPERATING HANDBOOK AND FAA APPROVED AIRPLANE FLIGHT MANUAL

SUPPLEMENT NO. 3 FOR AUXILIARY VACUUM SYSTEM

This supplement must be attached to the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual when the Piper Auxiliary Vacuum System is installed in accordance with Piper Drawing 85387-2. The information contained herein supplements or supersedes the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual only in those areas listed herein. For limitations, procedures and performance information not contained in this supplement, consult the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual.

FAA APPROVED:

PETER É. PECK

D.O.A. NO. SO-1

THE NEW PIPER AIRCRAFT, INC. VERO BEACH, FLORIDA

DATE OF APPROVAL: JULY 12, 1995

ISSUED: JULY 12, 1995

REPORT: VB-1611

SECTION 1 - GENERAL

This supplement supplies information necessary for the operation of the airplane when the optional Piper Auxiliary Vacuum System is installed. The information contained within this supplement is to be used in conjunction with the complete handbook.

SECTION 2 - LIMITATIONS

- The auxiliary vacuum system is limited to standby function only.
 Do not take off with the engine driven dry air pump inoperative.
- 2. Discontinue flight in Instrument Meteorological Conditions (IMC) if vacuum pressure falls below 4.8 In. Hg.
- 3. The auxiliary pump/motor assembly and elapsed time indicator must be removed from service after 500 hours accumulated operating time or 10 years, whichever occurs first.

SECTION 3 - EMERGENCY PROCEDURES

- (a) VAC OFF or Vacuum Inop. Warning Auxiliary Vacuum Switch AUX ON.
- (b). Verify vacuum pressure of 4.8 to 5.2 inches of mercury.

CAUTION

Compass error may exceed 10 when auxiliary vacuum system is in operation.

(c). Monitor electrical load - Verify alternator capacity is not being exceeded as indicated by the ammeter. If required, turn off nonessential electrical equipment.

REPORT: VB-1611 9-10

ISSUED: JULY 12, 1995

SECTION 4 - NORMAL PROCEDURES

- A. Preflight Check.
 - Turn on battery master switch on and verify that VAC OFF lamp lights.

NOTE

Due to electrical power requirement of the auxiliary vacuum pump it is suggested that the engine be operating while making the following checks.

- Turn on auxiliary vacuum pump on and verify AUX ON light is illuminated and electrical load is approximately 15 amps on ammeter.
- 3. Turn off auxiliary vacuum pump and verify AUX ON light goes out.
- B. Inflight Check Prior to entering instrument flight conditions.
 - 1. Turn off non-essential electrical equipment.
 - Turn on auxiliary vacuum pump and verify AUX ON light illuminated and electrical load is approximately 15 amps on ammeter.
 - 3. Turn off auxiliary vacuum pump and verify AUX ON light goes out.

NOTE

For maximum service life, avoid continuous non-emergency operation of the auxiliary vacuum pump.

SECTION 5 - PERFORMANCE

No change.

SECTION 6 - WEIGHT & BALANCE

Factory installed optional equipment is included in the licensed weight and balance data in section 6 of the Pilot's Operating Handbook.

ISSUED: JULY 12, 1995

REPORT: VB-1611

SECTION 7 - DESCRIPTION AND OPERATION

The auxiliary dry air pump system provides an independent back-up source of pneumatic power to operate the gyro flight instruments in the event the engine driven air pump fails.

The auxiliary pump is mounted on the forward side of the firewall and connects to the primary system at a manifold downstream of the vacuum regulator. Isolation of the primary and auxiliary systems from each other is accomplished by check valves on each side of the manifold. The primary system vacuum switch is located on the regulator and senses vacuum supplied to the gyros.


A control switch (labeled AUX VAC) for the auxiliary pump system is located on the right side of the instrument panel near the vacuum suction gage.

The switch button incorporates two annunciator light sections labeled VAC OFF and AUX ON. The VAC OFF section is controlled by a vacuum switch in the primary pneumatic system and illuminates an amber light when the engine driven pump is inoperative or when the system vacuum falls below the switch activation level. The AUX ON section is controlled by a vacuum switch on the manifold and illuminates a blue light when the auxiliary pump is operating and creating a vacuum in the system. When the auxiliary pump is activated at high altitude, or if the system has developed air leaks, the AUX ON light may fail to illuminate. This indicates that the system vacuum is still below the AUX ON switch activation level even though the auxiliary pump is operating. The annunciator lights do not incorporate a press-to-test feature, if the lights do not illuminate as expected, check for burned out lamps, replace with MS25237-327 bulbs and retest the system.

System electrical protection is provided by a 20 amp circuit breaker in the pump motor circuit and a 5 amp circuit breaker in the annunciator light circuit. The breakers are mounted on the circuit breaker panel.

REPORT: VB-1611 9-12

ISSUED: JULY 12, 1995

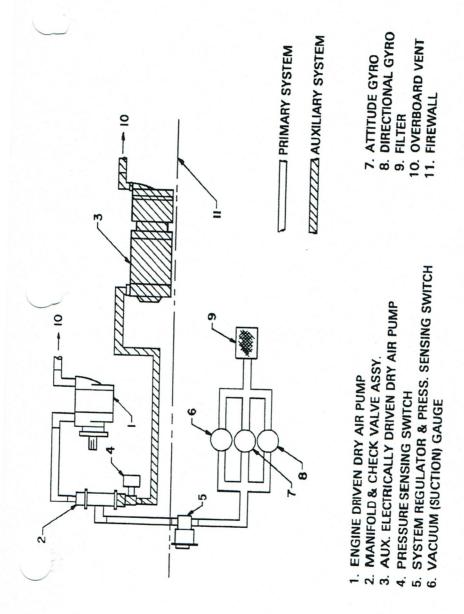

ISSUED: JULY 12, 1995

REPORT: VB-1611 9-13 THIS PAGE INTENTIONALLY LEFT BLANK

REPORT: VB-1611 9-14

ISSUED: JULY 12, 1995



Vacuum/Pressure Gyroscopic Flight Instrument System

ATTENTION:

MECHANIC/SERVICE FACILITY

This important notice must be given to the Owner/ Operator of the aircraft into which this air pump is installed. FAILURE TO DO SO MAY RESULT IN DEATH, BODILY INJURY, OR PROPERTY DAMAGE.

ATTENTION:

AIRCRAFT OWNER/OPERATOR

This important notice must be (1) read and understood and followed before operating the aircraft into which this air pump is installed, (2) distributed to all pilots using the aircraft, and (3) permanently retained in the Pilot's Operating Handbook for this aircraft. FAILURE TO DO SO MAY RESULT IN DEATH, BODILY INJURY, OR PROPERTY DAMAGE.



Parker Hannifin Corporation

Airborne Division 711 Taylor St. P.O. Box 4032 Elyria, Ohio 44036 USA (440) 284-6300

<u>Subject:</u> SAFETY WARNING - Vacuum/Pressure Gyroscopic Flight Instrument Power System.

Applicability: This document communicates safety warning information concerning aircraft using air pumps to power gyro flight instruments while flying Instrument Flight Rules (IFR).

WARNING: FAILURE TO FOLLOW THE FOLLOWING INSTRUCTIONS MAY RESULT IN DEATH, BODILY INJURY, OR PROPERTY DAMAGE:

- A BACK-UP PNEUMATIC POWER SOURCE FOR THE AIR DRIVEN GYROS, OR A BACK-UP ELECTRIC ATTITUDE GYRO INSTRUMENT, MUST BE INSTALLED IN ALL AIRCRAFT WHICH FLY IFR.
- 2. ANY INOPERATIVE AIR PUMP OR OTHER COMPONENT OF THE GYRO SYSTEM, AND ANY INOPERATIVE BACK-UP SYSTEM OR COMPONENT, MUST BE REPLACED PRIOR TO THE NEXT FLIGHT.
- 3. THIS PILOT SAFETY WARNING MUST BE PERMANENTLY RETAINED IN THE PILOT'S OPERATING HANDBOOK FOR THE AIRCRAFT INTO WHICH THIS AIR PUMP IS

<u>Explanation:</u> Failure of the air pump or any other component of the pneumatic system during IFR flight in Instrument Meteorological Conditions (IMC) can lead to spatial disorientation of the pilot and subsequent loss of aircraft control. This could result in an accident causing death, bodily injury, or property damage.

Use of single-engine aircraft in IMC is increasing. Many single-engine aircraft do not have a back-up pneumatic power source or back-up electric attitude gyro instruments. In aircraft without such back-up devices, the pilot due to added workload may not be able to fly the aircraft with only "partial panel" instruments (that is, turn and slip indicator, altimeter, and airspeed indicator) in the event of primary air pump or pneumatic system failure during IMC.

Air pump or pneumatic system failures can and do occur without warning. This can be a result of various factors, including but not limited to normal wear-out of components, improper installation or maintenance, premature failure, or use of substandard overhauled components. It is recommended that an annuciator light or other device be installed to warn the pilot of loss of gyro power so that the pilot can take corrective action prior to the loss of correct gyro information.

Since air pump life cannot be accurately predicted and air pumps can fail without warning, the instructions set forth in this document must be followed.

PILOT'S OPERATING HANDBOOK AND FAA APPROVED AIRPLANE FLIGHT MANUAL

SUPPLEMENT NO. 7 FOR GARMIN GNS 430 VHF COMMUNICATION TRANSCEIVER/VOR/ILS RECEIVER/GPS RECEIVER

This supplement must be attached to the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual when the Garmin GNS 430 VHF Communication Transceiver/VOR/ILS Receiver/Global Positioning System is installed per the Equipment List. The information contained herein supplements or supersedes the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual only in those areas listed herein. For limitations, procedures and performance information not contained in this supplement, consult the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual.

FAA APPROVED:

PETER E. PECK D.O.A. NO. SO-1 THE NEW PIPER AIRCRAFT, INC. VERO BEACH, FLORIDA

DATE OF APPROVAL: NOVEMBER 6, 1998

ISSUED: JULY 12, 1995

REVISED: NOVEMBER 6, 1998

REPORT: VB-1611

SECTION 1 - GENERAL

The GNS 430 System is a fully integrated, panel mounted instrument, which contains a VHF Communications Transceiver, a VOR/ILS receiver, and a Global Positioning System (GPS) Navigation computer. The system consists of a GPS antenna, GPS receiver, VHF VOR/LOC/GS antenna, VOR/ILS receiver, VHF COMM antenna and a VHF Communications transceiver. The primary function of the VHF Communication portion of the equipment is to facilitate communication with Air Traffic Control. The primary function of the VOR/ILS Receiver portion of the equipment is to receive and demodulate VOR, Localizer, and Glide Slope signals. The primary function of the GPS portion of the system is to acquire signals from the GPS system satellites, recover orbital data, make range and Doppler measurements, and process this information in real-time to obtain the user's position, velocity, and time.

Provided the GARMIN GNS 430's GPS receiver is receiving adequate usable signals, it has been demonstrated capable of and has been shown to meet the accuracy specifications for:

VFR/IFR enroute, terminal, and non-precision instrument approach (GPS, Loran-C, VOR, VOR-DME, TACAN, NDB, NDB-DME, RNAV) operation within the U.S. National Airspace System in accordance with AC 20-138.

North Atlantic Minimum Navigation Performance Specification (MNPS) Airspace in accordance with AC 91-49 and AC 120-33.

Navigation is accomplished using the WGS-84 (NAD-83) coordinate reference datum. Navigation data is based upon use of only the Global Positioning System (GPS) operated by the United States of America.

REPORT: VB-1611 9-42

ISSUED: JULY 12, 1995 REVISED: NOVEMBER 6. 1998

SECTION 2 - LIMITATIONS

- A. The GARMIN GNS 430 Pilot's Guide, p/n 190-00140-00, Rev. A, dated October 1998, or later appropriate revision, must be immediately available to the flight crew whenever navigation is predicated on the use of the system.
- B. The GNS 430 must utilize the following or later FAA approved software versions:

Sub-System	Software Version
Main	2.00
GPS .	2.00
COMM	2.00
VOR/LOC	2.00
G/S	2.00

The main software version is displayed on the GNS 430 self test page immediately after turn-on for 5 seconds. The remaining system software versions can be verified on the AUX group sub-page 2, "SOFTWARE/DATABASE VER".

- C. IFR enroute and terminal navigation predicated upon the GNS 430's GPS Receiver is prohibited unless the pilot verifies the currency of the data base or verifies each selected waypoint for accuracy by reference to current approved data.
- D. Instrument approach navigation predicated upon the GNS 430's GPS Receiver must be accomplished in accordance with approved instrument approach procedures that are retrieved from the GPS equipment data base. The GPS equipment data base must incorporate the current update cycle.
 - Instrument approaches utilizing the GPS receiver must be conducted in the approach mode and Receiver Autonomous Integrity Monitoring (RAIM) must be available at the Final Approach Fix.

ISSUED: JULY 12, 1995

REVISED: NOVEMBER 6, 1998

REPORT: VB-1611

SECTION 2 - LIMITATIONS (continued)

- Accomplishment of ILS, LOC, LOC-BC, LDA, SDF, MLS or any other type of approach not approved for GPS overlay with the GNS 430's GPS receiver is not authorized.
- Use of the GNS 430 VOR/ILS receiver to fly approaches not approved for GPS require VOR/ILS navigation data to be present on the external indicator.
- 4. When an alternate airport is required by the applicable operating rules, it must be served by an approach based on other than GPS or Loran-C navigation, the aircraft must have the operational equipment capable of using that navigation aid, and the required navigation aid must be operational.
- VNAV information may be utilized for advisory information only. Use
 of VNAV information for Instrument Approach Procedures does not
 guarantee Step-Down Fix altitude protection, or arrival at approach
 minimums in normal position to land.
- E. If not previously defined, the following default settings must be made in the "SETUP 1" menu of the GNS 430 prior to operation (refer to Pilot's Guide for procedure if necessary):
 - 1. dis, spd...... $\overset{n}{m}$ k_t (sets navigation units to "nautical miles" and "knots")
 - 2. alt, vs......ft fpm (sets altitude units to "feet" and "feet per minute")
 - 3. map datum..WGS 84 (sets map datum to WGS-84, see not below)
 - 4. posn.....deg-min (sets navigation grid units to decimal minutes)

NOTE

In some areas outside the United States, datums other than WGS-84 or NAD-83 may be used. If the GNS 430 is authorized for use by the appropriate Airworthiness authority, the required geodetic datum must be set in the GNS 430 prior to its use for navigation.

REPORT: VB-1611 9-44

ISSUED: JULY 12, 1995 REVISED: NOVEMBER 6, 1998

SECTION 3 - EMERGENCY PROCEDURES

ABNORMAL PROCEDURES

- A. If GARMIN GNS 430 navigation information is not available or invalid, utilize remaining operational navigation equipment as required.
- B. If "RAIM POSITION WARNING" message is displayed the system will flag and no longer provide GPS based navigational guidance. The crew should revert to the GNS 430 VOR/ILS receiver or an alternate means of navigation other than the GNS 430's GPS receiver.
- C. If "RAIM IS NOT AVAILABLE" message is displayed in the enroute, terminal, or initial approach phase of flight, continue to navigate using the GPS equipment or revert to an alternate means of navigation other than the GNS 430's GPS receiver appropriate to the route and phase of flight. When continuing to use GPS navigation, position must be verified every 15 minutes using the GNS 430's VOR/ILS receiver or another IFR-approved navigation system.
- D. If "RAIM IS NOT AVAILABLE" message is displayed while on the final approach segment, GPS based navigation will continue for up to 5 minutes with approach CDI sensitivity (0.3 nautical mile). After 5 minutes the system will flag and no longer provide course guidance with approach sensitivity. Missed approach course guidance may still be available with 1 nautical mile CDI sensitivity by executing the missed approach.
- E. In an in-flight emergency, depressing and holding the Comm transfer button for 2 seconds will select the emergency frequency of 121.500 Mhz into the "Active" frequency window.

ISSUED: JULY 12, 1995 REVISED: NOVEMBER 6, 1998

REPORT: VB-1611

SECTION 4 - NORMAL PROCEDURES

WARNING

Familiarity with the enroute operation of the GNS 430 does not constitute proficiency in approach operations. Do not attempt approach operations in IMC prior to attaining proficiency in the use of the GNS 430 approach feature.

A. DETAILED OPERATING PROCEDURES

Normal operating procedures are described in the GARMIN GNS 430 Pilot's Guide, p/n 190-00140-00, Rev. A, dated October 1998, or later appropriate revision.

B. PILOT'S DISPLAY

The GNS 430 System data will appear on the Pilot's HSI. The source of data is either GPS or VLOC as annunciated on the display above the CDI key.

C. AUTOPILOT/FLIGHT DIRECTOR OPERATION

Coupling of the GNS 430 System steering information to the autopilot/flight director can be accomplished by engaging the autopilot/flight director in the NAV or APR mode.

When the autopilot/flight director system is using course information supplied by the GNS 430 System and the course pointer is not automatically driven to the desired track, the course pointer on the HSI must be manually set to the desired track (DTK) indicated by the GNS 430. For detailed autopilot/flight director operational instructions, refer to the FAA Approved Flight Manual Supplement for the autopilot/flight director.

REPORT: VB-1611

ISSUED: JULY 12, 1995 REVISED: NOVEMBER 6, 1998

SECTION 4 - NORMAL PROCEDURES (continued)

D. AUTOMATIC LOCALIZER COURSE CAPTURE

By default, the GNS 430 automatic localizer course capture feature is enabled. This feature provides a method for system navigation data present on the external indicators to be switched automatically from GPS guidance to localizer / glide slope guidance at the point of course intercept on a localizer at which GPS derived course deviation equals localizer derived course deviation. If an offset from the final approach course is being flown, it is possible that the automatic switch from GPS course guidance to localizer / glide slope course guidance will not occur. It is the pilot's responsibility to ensure correct system navigation data is present on the external indicator before continuing a localizer based approach beyond the final approach fix.

SECTION 5 - PERFORMANCE

No change.

SECTION 6 - WEIGHT AND BALANCE

Factory installed optional equipment is included in the licensed weight and balance data in Section 6 of the basic Pilot's Operating Handbook.

SECTION 7 - DESCRIPTION AND OPERATION

See GNS 430 Pilot's Guide for a complete description of the GNS 430 system.

ISSUED: JULY 12, 1995 REVISED: JULY 14, 2000 REPORT: VB-1611 9-47 THIS PAGE INTENTIONALLY LEFT BLANK

REPORT: VB-1611 9-48

ISSUED: JULY 12, 1995 REVISED: NOVEMBER 6, 1998

PILOT'S OPERATING HANDBOOK AND FAA APPROVED AIRPLANE FLIGHT MANUAL

SUPPLEMENT NO. 8 FOR S-TEC SYSTEM 55 TWO AXIS AUTOMATIC FLIGHT GUIDANCE SYSTEM WITH TRIM MONITOR

This supplement must be attached to the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual when the S-TEC System 55 Autopilot is installed per STC SA8402SW-D. The information contained herein supplements or supersedes the basic Pilot's Operating Handbook and FAA Approved Airplane Flight Manual only in those areas listed herein. For limitations, procedures and performance information not contained in the supplement, consult the basic Pilot's Operating Handbook and FAA Approved Airplane Flight Manual.

FAA APPROVED:

PETER E. PECK D.O.A. NO. SO-1

THE NEW PIPER AIRCRAFT, INC.

VERO BEACH, FLORIDA

DATE OF APPROVAL: DECEMBER 18, 1998

ISSUED: JULY 12, 1995

REVISED: DECEMBER 18, 1998

REPORT: VB-1611

SECTION 9 SUPPLEMENT 8

PA-28-181, ARCHER III

THIS PAGE INTENTIONALLY LEFT BLANK

REPORT: VB-1611

9-50

ISSUED: JULY 12, 1995 REVISED: DECEMBER 18, 1998

PILOT'S OPERATING HANDBOOK AND FAA APPROVED AIRPLANE FLIGHT MANUAL

SUPPLEMENT NO. 9 FOR S-TEC MANUAL ELECTRIC TRIM SYSTEM WITH TRIM MONITOR (Serial numbers 2843058 and up)

The FAA approved operational supplement for the S-TEC Manual Electric Trim System, installed in accordance with STC SA8388SW-D, is required for operation of this system. S-TEC will be responsible to supply and revise the operational supplement. It is permitted to include the S-TEC supplement in this location of the Pilot's Operating Handbook unless otherwise stated by S-TEC. The information contained in the S-TEC supplement may supersede or supplement the information in the basic Pilot's Operating Handbook and FAA Approved Airplane Flight Manual with respect to the operation of the S-TEC Manual Electric Trim System. For limitations, procedures and performance information not contained in the S-TEC supplement, consult the basic Pilot's Operating Handbook and FAA Approved Airplane Flight Manual.

ISSUED: JULY 12, 1995 REVISED: DECEMBER 6, 1999 REPORT: VB-1611 9-51 THIS PAGE INTENTIONALLY LEFT BLANK

REPORT: VB-1611 9-52

ISSUED: JULY 12, 1995 REVISED: DECEMBER 6, 1999

. . . .